




# LAKETROLLER | manual downrigger

1071 • 1073

INSTALLATION

MAINTENANCE

USE & SAFETY

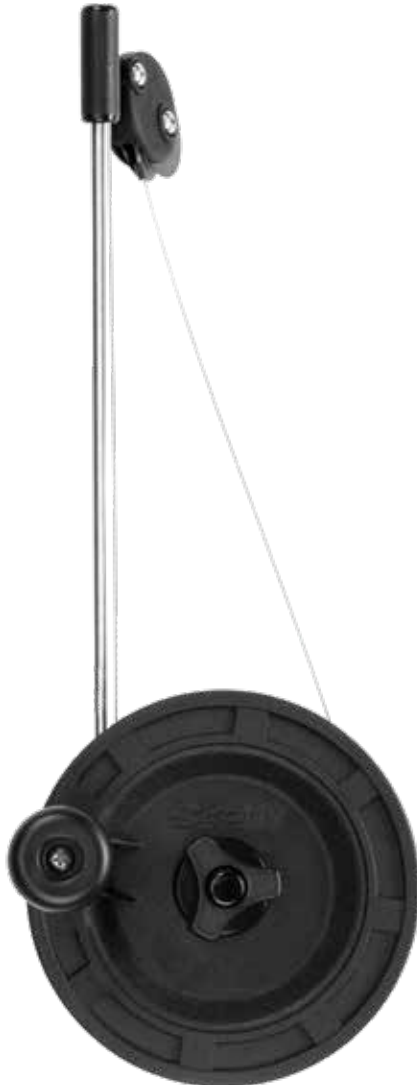

**CAUTION!** Read through this entire booklet before operating your Scotty Downrigger. Improper use may damage your Downrigger and void the warranty. You may also expose yourself to unnecessary danger and physical injury.

# Mounting

## Laketroller with Side Deck Mount

This Laketroller is designed to enter the side deck mount only when pointing inboard. And is locked in every other direction.

To ensure the 241 mount is correctly positioned, the Scotty wordmark and INBOARD marking should be facing you.



When mounting the 241 mount, a Scotty 441 Backing Plate or a wood or metal plate on the underside of the gunnel should be used to distribute the load.

When side mounting, the bracket should be mounted as flush to the gunnel top as possible to allow full swivel rotation.

## Laketroller with Clamp Mount

If necessary, use a small block of wood for spacing on the outside of the gunwale. Make sure your Laketroller is securely clamped. A safety line tied from the Laketroller to the boat is a good idea.




# How to use your Laketroller

1. Fix Laketroller to boat and attach lead weight to metal swivel-hook (Maximum recommended weight is 2-3 lbs or 0.9kg - 1.35kg)
2. For release clip set-up, refer to diagram at bottom of page.
3. Ease off Laketroller brake tension nut and crank down to desired depth, while letting fishing line unwind from fishing reel with light tension drag on reel. One complete revolution of the Laketroller spool releases one foot of line. Count turns to troll at the depth you want and then set holding drag lightly, just enough to resist weight.

## Mini Power grip release instructions

1. Attach the snap swivel of the Mini Power Grip release to the downrigger weight.
2. Attach your fishing line to the Mini Power Grip release by squeezing the jaws apart and placing your fishing line between the pads. The release tension is lighter at the outer tip, and is heavier the further into the jaws you place the line.
3. The tension adjuster can be moved forward or back to double the release tension.

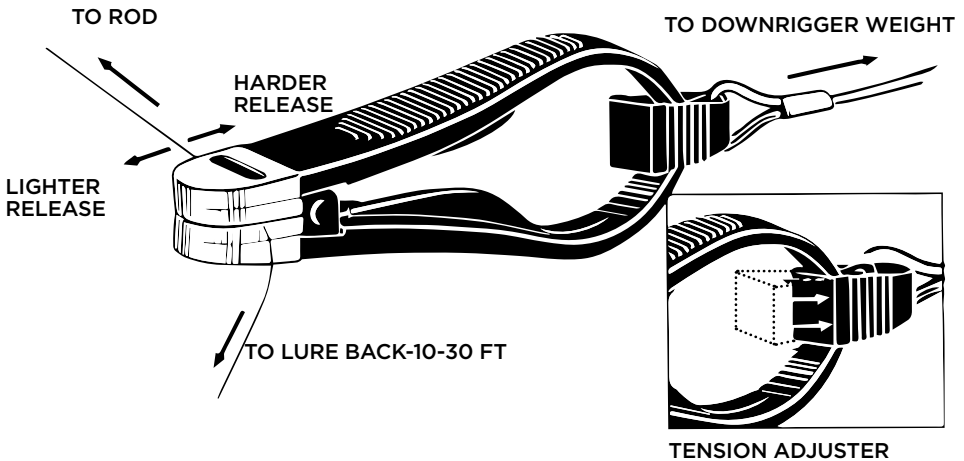



## **SCOTTY FISHING & OUTDOOR PRODUCTS**

2065 Henry Ave West  
Sidney, British Columbia  
Canada V8L 5Z6

<b>PHONE</b>	250 656 8102
<b>TOLL FREE</b>	1 800 214 0141
<b>FAX</b>	250 656 8126
<b>EMAIL</b>	scotty@scotty.com



**[www.scotty.com](http://www.scotty.com)**

To obtain parts, information or to locate the warranty service depot nearest you, check out our website: [scotty.com/contact](http://scotty.com/contact)

Although Scotty makes every effort to ensure the accuracy of specifications at the time of publication, specifications for products described in this publication are subject to change without notice.

Contact Scotty for the most current information.